



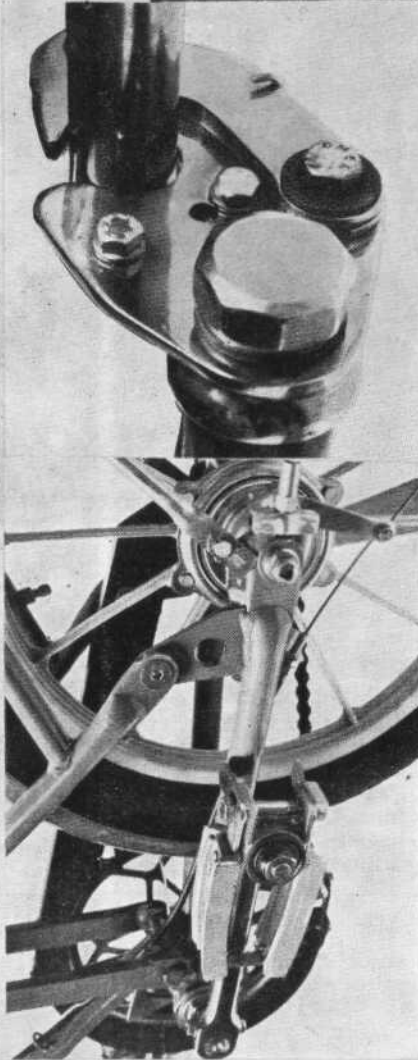

DI BLASI

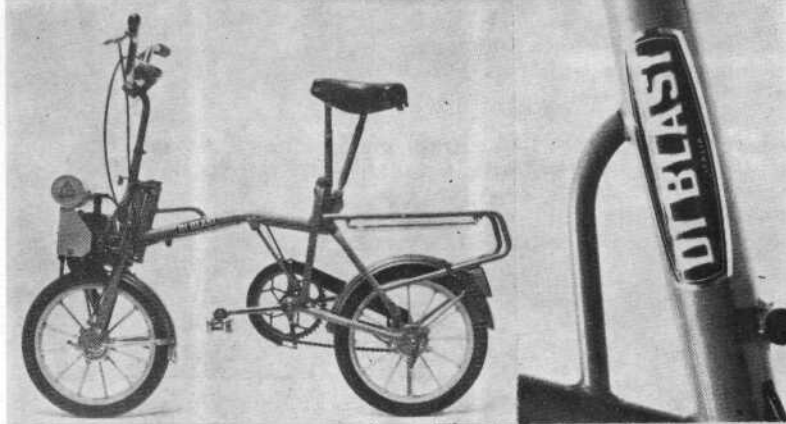

mod. R 20
(patented)

TO UNFOLD THE BICYCLE

When the bicycle is folded, it stands up on the rear carrier. (fig. 1)

Lift the handlebar until it is locked by the special hook; Make sure that the springs which pull the hook are functioning properly; Make sure the hook is properly positioned. (see note) (fig. 2)

Release the frame hook located near the carrying handle and then pull the saddle until the frame is locked by the hook located below the saddle. Unfold the pedals. (fig. 3-4)



1



2



3



4

TO FOLD THE BICYCLE

Fold the pedals in such a way that the tips are hooked by the pedal crank. Turn the pedal cranks in an horizontal position. (fig. 4)

Release the hook located below the saddle and push the saddle forward and down. The frame is locked in the folded position by the hook located near the carrying handle. (fig. 3-2)

Unhook the handlebars and lower them; The bicycle stands up on the rear carrier. (fig. 1)

ACCESSORIES

- Front luggage rack
- Rear luggage rack
- Bag

TECHNICAL SPECIFICATIONS

- 1) **Dimensions** of folded bicycle :
Length cm 90 (35,4 in); Width cm 25 (9,8 in); Height cm 62 (24,4 in)
- 2) **Weight** Kg 16.
- 3) **Tires** (front & rear) 16x1,75x2.
- 4) **Internal expanding shoe brakes**
- 5) **Saddle**: adjustable on 3 positions
- 6) **3 Speed** derailleur.

NOTE

The hook is properly positioned if it touches the tube of the handlebars with its central area. To adjust the contact turn the hook hinge pin (which

is eccentric) for a fraction of turn after having loosen its nut located under the plate.